




FRACTION FINDER USER MANUAL

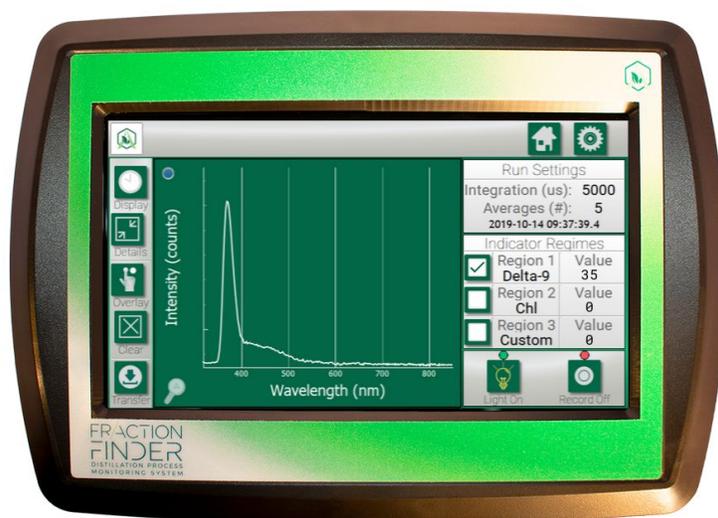

Manual for Firmware Version 1.2.2

YOU MUST READ THIS MANUAL BEFORE USE

WARNING: NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE

TABLE OF CONTENTS

Section 1: Description and Principles of Operation	3
Section 2: Construction	4
Section 3: Unpacking and Inspecting	4
Section 4: Installation	5
Section 5: Software/Interface	7
Section 6: General Procedure	12
Section 7: Issues	17
Section 8: Software Update Instructions	18
Section 9: Factory Repairs	19
Section 10: Optical Measurement	19
Section 11: Specifications and Appendix	20
Section 12: Appendix	20
Section 13: Terms and Conditions	22

Section 1: Description and Principles of Operation

The FRACTION FINDER is the world's first in-line molecule monitoring system for botanical oil production. The technology uses "fluorescence spectroscopy" to measure molecules based on how they interact with light.

The FRACTION FINDER is used to identify the contents of a flow through a glass tube in-situ, in real-time. Knowing the flow and the relative concentration of molecules, and whether that purity is increasing, or decreasing can help make optimal process decisions. In our work, we found processors were proudest of their craft when they could get the purest, most consistent batches for their clients. It is with this goal in mind that the FRACTION FINDER was developed.

The result is the FRACTION FINDER, a real-time system that allows the user to see:

- The relative concentration of Cannabinoids
- The flow of Cannabinoids

The initial system was designed specifically for plant oils. This spectroscopic technique was borrowed from other industries and empirically applied to Cannabinoid processing. Our research was conducted in processing labs that were running first and second pass short path distillation for the purpose of creating the purest Cannabinoids oils.

The ability to directly track molecules of interest during distillation comes with a few key benefits:

- The data to improve purity
- The information to improve process techniques and enhance process repeatability
- The awareness of process oddities, contamination, and by-products

What the FRACTION FINDER is not:

*The FRACTION FINDER is not a quantitative measure. It provides qualitative information that directly tracks the relative concentration of Cannabinoids. It is Arometrix's goal to amass enough spectral data from the FRACTION FINDER to eventually be able to determine quantitative purity in the **future**.*

The FRACTION FINDER cannot replace good laboratory practice and experience. The FRACTION FINDER's data, in combination with temperature, vacuum, good laboratory practice, and experience will help the experienced distillation scientist further perfect their craft.

Section 2: Construction

The FRACTION FINDER is composed of two key components: the **sensor** and the **display**.

The sensor acts as the “eyes” of the system, whereas the display acts as both the “brains” and “face” of the system.

Sensor: The **sensor** contains the “eyes” of the system”. This optical transducer uses a light source and a full wavelength spectrometer along with signal conditioning circuitry. The **sensor** is mounted on size 29 or 34 glass, depending on the sensor size option ordered. Adapters are also available for purchase to get the sensor on smaller glass, such as size 24 glass.

Display: The **display** contains the “brains” of the system. This 7 inch LCD TFT display consists of a compute module. The information from the sensor is digitally transmitted via the sensor cable to the **display**, where the spectra are cataloged, analyzed, graphed and displayed as a function of time. The **display** then does additional math on this multi-wavelength spectral temporal data (hence the term “compute module”) and creates a visualization for the user where both flow and relative potency are deduced. The **display** has a pole-mounting bracket installed in the back of it so it can easily be mounted to a lab pole.

**This unit is intended for lab use. Care should be taken not to spill anything on it, as it is not waterproof.*

Section 3: Unpacking and Inspecting

After the instrument is received, it should be carefully unpacked and inspected for damage during shipment and to confirm that all components are present.

Each FRACTION FINDER should come with:

- o Display (with pole mounting bracket)
- o Screw for Mounting Bracket
- o Sensor (Size 29, or 34)
- o Sensor Cable, USB, 2 feet
- o Light-Blocking Tape (for sensor)
- o International Power Supply
- o 1-Year Warranty Card
- o Quick Start Guide and User Manual




Section 4: Installation

The equipment should be in a clean, dry environment for the best results. Care should be taken to avoid any spillage.

1. Apply the **light-blocking tape** to the glassware apparatus. This is important as it will block ambient light from saturating your sensor's readings.



2. Install the optical sensor with the thicker part of the sensor down. For short-path distillation, the **sensor** should be installed on the condenser just before the cow as shown.
 - (1) Having the glass be of high quality will help increase the signal to noise ratio – which will yield better information.
 - (2) The sensor fits on most glass, but in some cases may require a slight extension; on Arometrix.com/shop, there are adapters that will satisfy a wide range of applications, including short-path distillation systems with Size 24 glass or “Hot Condenser”, as well as wiped film evaporators, and extractors. For wiped film evaporation, or extraction systems, the location will be different; however, the concept of placing the sensor prior to the collection point remains.

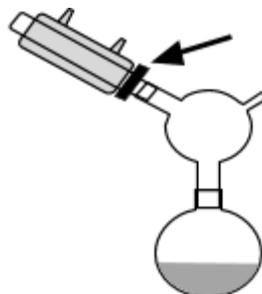

3. Insert the **sensor cable** into the back of the **sensor**.



4. Connect the other end of the **sensor cable** to the bottom of the **display**. The **sensor's** light will begin to “blink”, indicating that it has turned on. Give the sensor ~2-5 minutes to boot up.
5. Mount the **display** to a lab pole. The back of the display has a pole-mounting bracket pre-installed. Simply use the **screw for the mounting bracket** on the bracket to install and keep it snug on the pole. Alternatively, it can be placed on a desktop by placing the unit in a separate tablet stand.



6. Use the supplied AC adapter to power your display. This adapter provides clean short protected power to protect and ensure the accuracy of the internal circuitry.
7. The display will take a few seconds to turn. You will see splash screens, followed by the interface screen. (*Continue to **Section 5** to learn how to operate the interface.*)



8. Ensure that the Device Status and Server Status indicator on the bottom left-hand side of the **display** are green – *If not, make sure the cords are properly connected.*
9. Ensure that the “Light On/Light Off” toggle button is turned on. The light above it should be green.

Section 5: Software/Interface


After installation, the system is ready for immediate operation.

The FRACTION FINDER is meant to be an additional reference to existing methods for determining the current part of the distillation fraction. The system supports hot-swapping of the sensor to the display unit, even so, it is advised to have the sensor plugged into the system when the system is powered on.

Layout of Software and Different Viewing Options

There are currently two viewing options: the **Spectrum view** and the **Wavelength view**. These display options can be toggled between each other by tapping the “display” button (located in the top-left corner).

Spectrum View (Spectrograph)

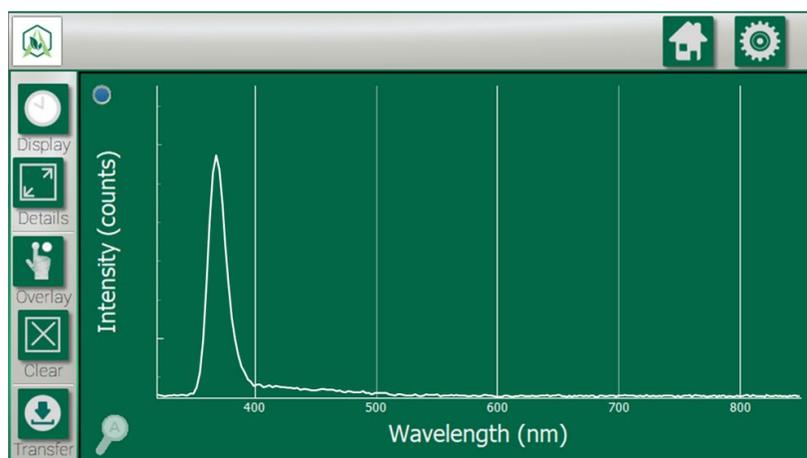

What it does: Displays current background/ambient light corrected spectral measurement.

How it should be used:


- 1) Give a broad indication of whether the system is detecting Heads or Main Body/Tails
 - a. This is an instantaneous representation of current spectral state.
 - b. This tab is difficult to track the Main Body and Tails change; use the Overlay button to assist with this.
 - c. The peak at 360-390nm is an internal excitation/reference peak (not a process indicator); tap the small circle on the top-left corner of the graph to remove this peak
- 2) Analyze current Exposure time and assist in “tuning” of exposure time parameter

Understanding the Graph (X-Y Axis)

X-axis = Wavelength (nm): The location of where the line shoots up (or fluoresces) indicates the molecule; different molecules have different wavelength regions

Y-axis = Intensity (counts): The height of this line, *in general*, indicates how much of that substance is present at that moment relative to earlier.

Wavelength View

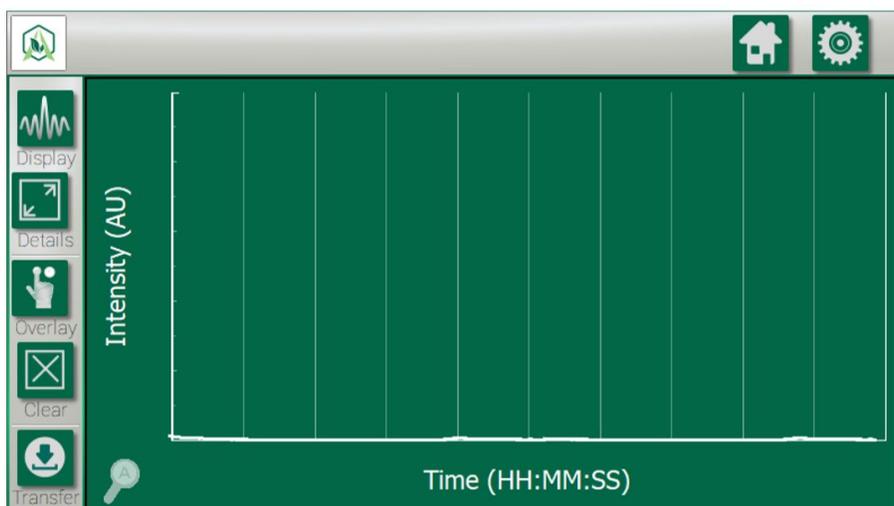

What it does: Displays and tracks the interpreted values from your measurement. This plot reduces the raw data and shows you the “highlights” of the run.

How it should be used:


- 1) Used to identify when the distillation is transferring from Heads to Main Body, or Main body to Tails
 - a. Due to the massive amount of data reduction, this plot is hard to analyze when trying to assess issues with individual measurements from the FRACTION FINDER
- 2) Analyze noise in your measurement over time, and assist in “tuning” of scans to average
- 3) This view is especially useful for tracking particular chemical oddities that occur at specific wavelengths. (One example is tracking both Chlorophyll and D9 during an extraction run.)

Understanding the Graph (X-Y Axis)

X-axis = Time (HH:MM:SS): As opposed to the Spectrum view, this tracks fractions as a function of time.

Y-axis = Intensity (AU): The height of this line indicates how much of that substance is present at that moment relative to earlier. (Note: These are AU as in Arbitrary Units; this is not quantification of potency.)

Setup Screen Tutorial

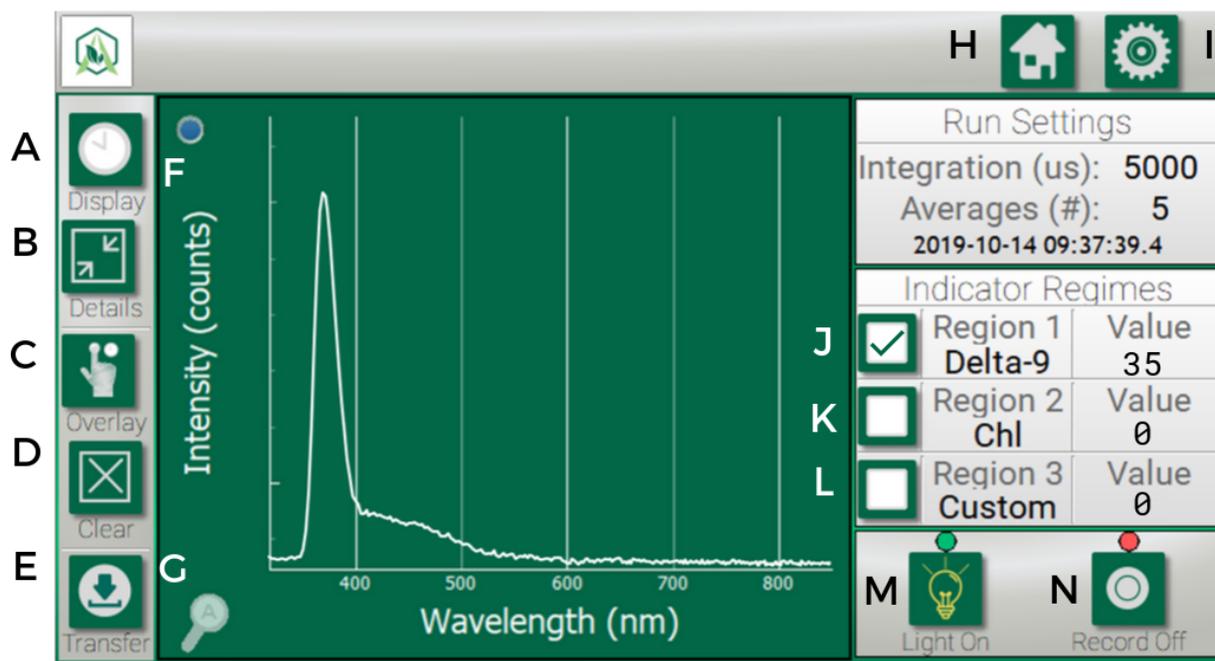

List of buttons:

- A. Display: Toggles between the two viewing options (Spectrum & Wavelength)
- B. Details: Expands the graph and removes the data on the right-hand side
- C. Overlay: Traces or “overlays” a peak of interest so you can compare it to a future peak
- D. Clear: Clears an “overlay” that you no longer want to track
- E. Transfer: Transfers recorded run data to a flash drive
- F. Reference Peak Remover: Removes the internal reference/excitation peak from Spectrum view *(only available in Version 1.2.3 or later)*
- G. Auto-Zoom: Returns zoom view to normal. You can zoom with 1 finger by drawing a bounding box.
- H. Home: Returns you to the Home if you are in Settings
- I. Settings: Allows you to adjust settings, such as Auto Integration Time, Scans to Average, and the Wavelength Tracker
- J. *Region 1-3 Checkboxes: Use only when in Wavelength view - By checking this box, it will populate the Wavelength plot with the corresponding molecule. This setting can be adjusted in Settings.*
- K. *Region 2 Checkbox: See I.*
- L. *Region 3 Checkbox: See I.*
- M. Light on/off: Turns the light on. This toggles between states.
- N. Record on/off: Turns the recording mode on. This toggles between states.

Settings Page Tutorial

When you tap the *Settings* button, you will see:


- Wavelength Settings
- Set Integration Time
- Set Scans to Average
- Clock Settings
- System Data

Wavelength Settings


In this tab, you will see:

- Edit Wavelength 1
- Edit Wavelength 2
- Edit Wavelength 3

These correspond with the Region 1, Region 2, and Region 3 that are shown on the **Wavelength View**. When you press one of these, you will see a Wavelength range. These will come with manufacturer defaults; however, you can edit the *From* and *To* how you see fit. *See below*.

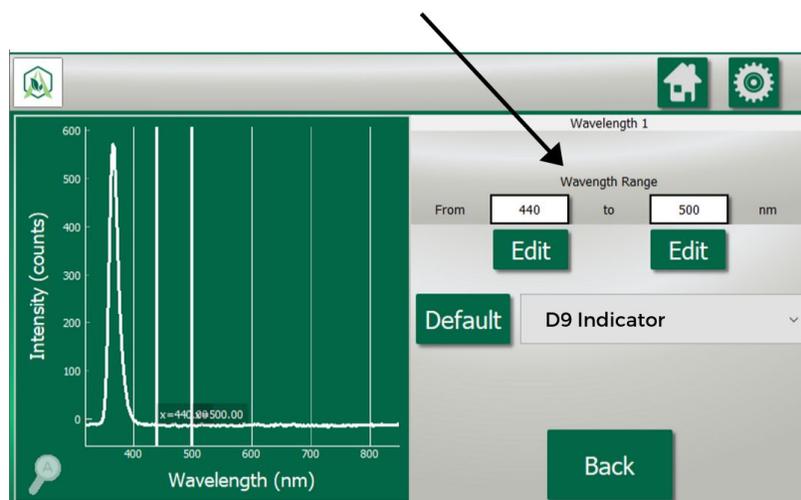

Click “Default” to return back to manufacturer default. Next to the “Default” button, you will see, a molecule dropdown. When you press the Molecule Indicator dropdown, you will see different molecule tracking options. You can select any of them, or set your own “Custom” molecule and region. *See below*.

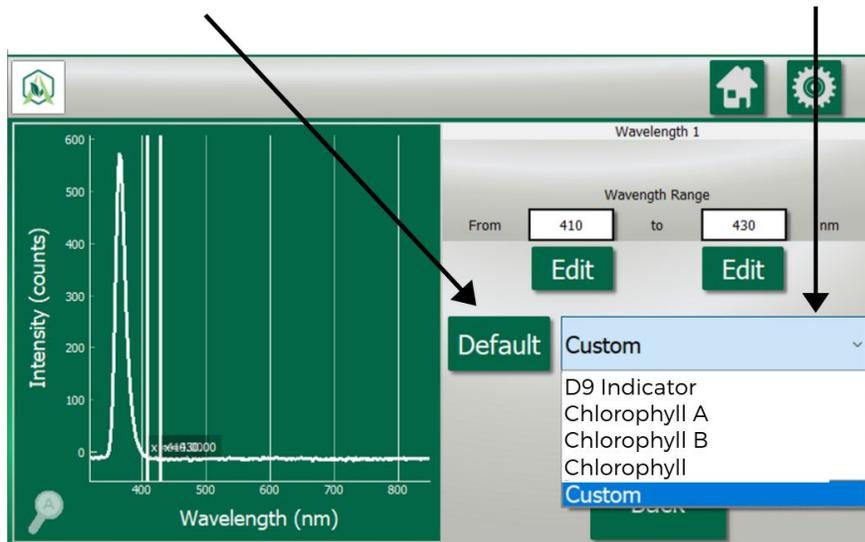

Set Integration Time

This is meant to enable “AID (Auto)” by clicking the checkbox in the bottom-left corner of the screen. Auto integration ensures that the signal from the spectrometer is maximized. It is **not recommended** to manually tune Integration Time, but it is feasible. *See Appendix for more information on manual tuning.*

Set Scans to Average

This sets how many optical readings the sensor takes before plotting and displaying a result. More readings that are averaged imply less noise, but less information. Arometrix recommends that you select 5.

Clock Settings

This should be set during initial acquisition. Set the Date Settings and the Time Settings. Then, Submit.

System Data

This will display “Bytes Available”, “Bytes Used”, and “Bytes Total”. It will also show you % memory used, and give you an option to “Clear Data”.

Section 6: General Procedure

Overview for Short-Path Distillation

- 1) Set Up Distillation System and Install Fraction Finder Equipment
- 2) Set Integration Time to Auto
- 3) Set Scans to Average to 5
- 4) Identify Transition from Heads to Main Body
- 5) Perform Flask Transfer & Let Distillation System Equilibrate
- 6) Identify Transition from Main Body to Tails
- 7) Perform Flask Transfer & Let Distillation System Equilibrate
- 8) Turn off Recording

Step 1) Set Up Distillation and Install Fraction Finder Equipment

- 1) Set up your short path distillation system as you usually would initially
- 2) Follow all steps in *Section 4 Installation*
 - a. Reminder: Ensure that the Device Status and Server Status indicator on the bottom of the **display** are green.
 - b. Reminder: Ensure that the light is on. If the light is not on, turn it on and wait for the indicator light above the button to turn green.
- 3) Let the distillation system reach desired vacuum temperature and pressure

Step 2) Set Integration Time to Auto


To set sensor **Integration Time**: Tap the Settings gear icon. Tap “Set Integration Time”. There is an AID (Auto) checkbox on the bottom-left corner of the display. Tap the checkbox - a check will appear, indicating that auto-integration determination has been enabled. This is **strongly recommended** as it will auto-determine an optimal integration time for the sensor throughout the entirety of the distillation. It is not recommended to manually tune Integration Time, but it is feasible. See Appendix.

Step 3) Set Scans to Average to 5

To set sensor **Scans to Average**: Tap the Settings gear icon. Tap “Set Scans to Average”. A typical value between 1 and 5 – It is strongly suggested that the scans to average is not set significantly larger than this value.

Step 4) Identify Transition from Heads to Main Body

While you are in “Heads”, you should see **ONE** single peak at ~365 nm (x-axis) on the **Spectrum view**. This is NOT a process indicator. This is the internal reference peak that the system uses.

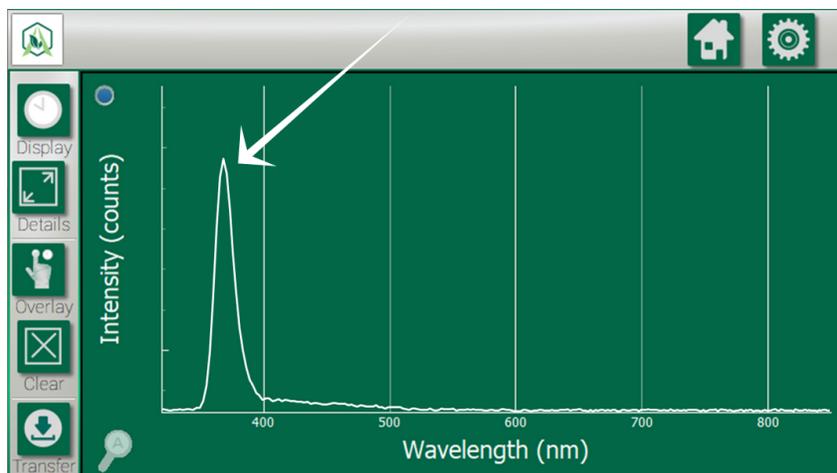


Note: Arrow on graph is for illustration purposes only.

Depending on the software version that you are using, this peak can be removed by tapping a small button on the display. **Once removed, during Heads, you should see NO peaks in the Spectrum view.**

However, if you see **MULTIPLE** peaks, this means that either: You have bad light contamination from lighting in the workspace (*Solution*: use the light-blocking tape) OR, if the peak is at 400-500 nm (x-axis value) the column is probably not clean and contains a contaminate from a previous distillation (*Solution*: Either stop the distillation and clean inside of glassware **OR** just make a note of it – it will likely be cleaned when the vaporized Heads flow through the column).


If you switch to the **Wavelength view**, you will also see no fluorescence, as depicted in the image below.

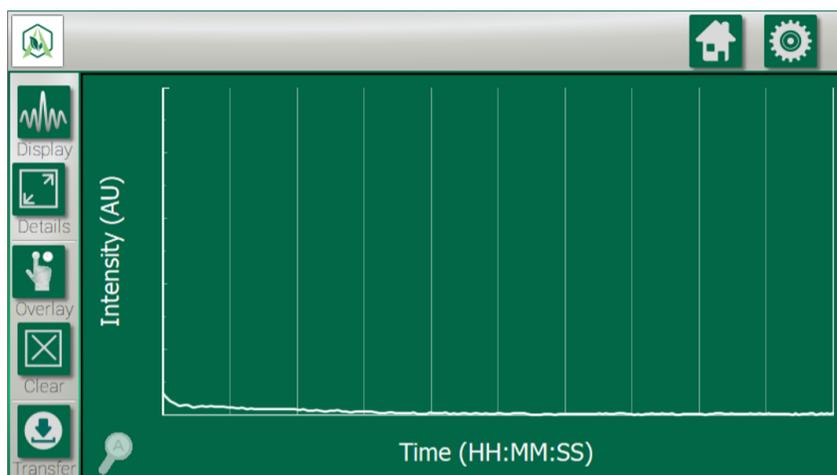

If you would like to Record your run, and export the run data afterward, now would be an optimal time to press the “Record” button. The circle above this button will turn green to indicate that it is recording.


For the actual Heads to Main Body Transition, there are two separate methods for identifying this:

Option A - Wavelength View: This view will show that there is a big peak in the value of the wavelength plot. An example plot is shown below.

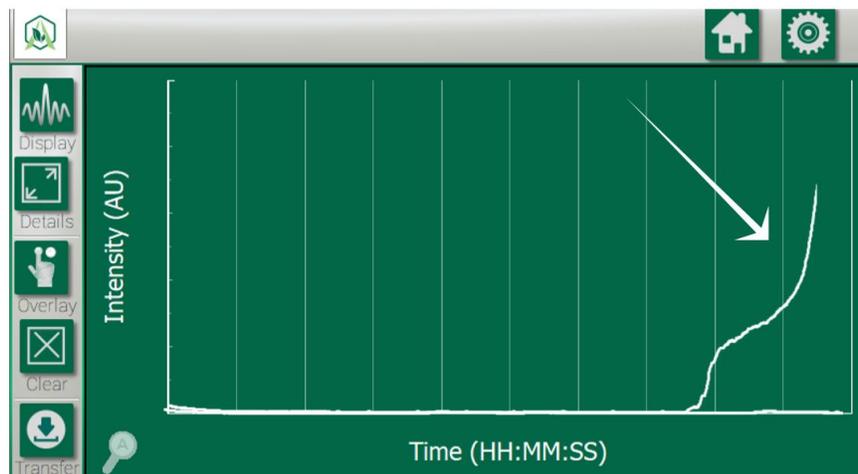

Note: Arrow on graph is for illustration purposes only.

Option B - Spectrum View: The other indicator is that a broad peak shows up in the Spectrum plot between 400-450nm. An example plot is shown below; keep in mind peak location and intensity may vary. Arometrix recommends that you use the Spectrum plot for an absolute indicator of the Heads to main-body transition.

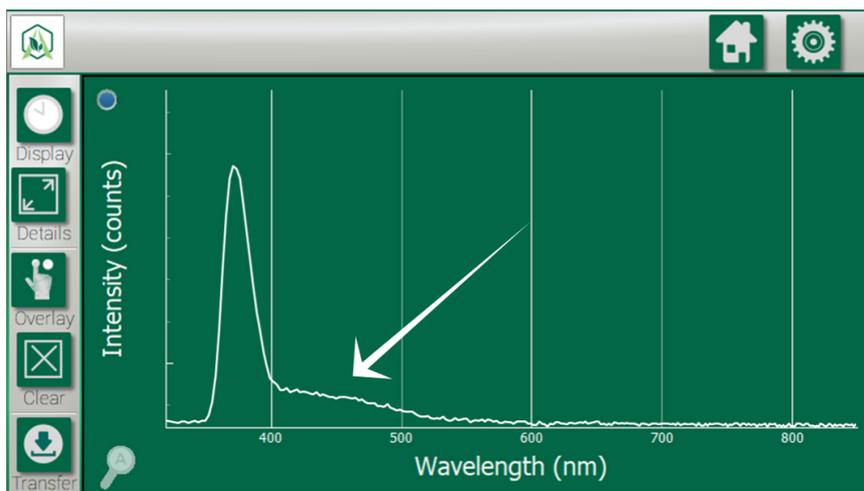

Note: Arrow on graph is for illustration purposes only.

Step 5) Perform Flask Transfer & Let Distillation System Equilibrate

- 1) Once you've entered Main Body, proceed as you typically would with a flask transfer.
 - a. It is advised that the Heads be allowed to distill for ~10 minutes before performing a flask to ensure that no solvents contaminate the Main Body.


- b. There is no need to turn off or hit the clear button on the FRACTION FINDER, unless you want to.
- 2) After flask transfer, let the system come to its equilibrated point (let pressure and temperature become relatively constant) before using the FRACTION FINDER
 - a. Keep in mind that the signal will be very low and all ambient lighting effects will greatly increase
 - b. Equilibration time will depend on system size. A 5L SPD can take 5-10 mins. A 10L SPD can be 10-15 minute. Mantle quality and pump quality are also factors for equilibration time.

Step 6) Identify Transition from Main Body to Tails

- 1) After 20 minutes from the flask transfer from Heads to the Main Body, the signal will become more stable
- 2) Check the Wavelength View
- 3) A sharp increase of the signal at the beginning will likely be shown, followed by a sharp drop-off of the signal to a stable moderate level
 - a. This initial increase is very concreted Main Body initially coming through the system as well as any oxidized/degraded fluid that may have been generated during the vacuum release while performing a flask transfer
- 4) This signal will likely stay constant for the next 1 – 1.5 hours, then will slowly start to raise. An example plot is shown below.
- 5) The constant increase or significant increase of signal at this point indicates that the distillation may be entering Tails, but the signal also could vary slightly with:
 - a. Significant changes in vacuum pressure
 - b. Significant changes in flow rate
 - c. Background light gets brighter
- 6) If a raise is observed that does not seem to track with the three outlined changes above, the distillation has entered Tails


For the Main Body to Tails Transition, there are two separate methods for identifying this:

Option A - Wavelength View: This view will show that there is a sharp increase in the value of the wavelength plot. An example plot is shown below. This view is recommended for this change.

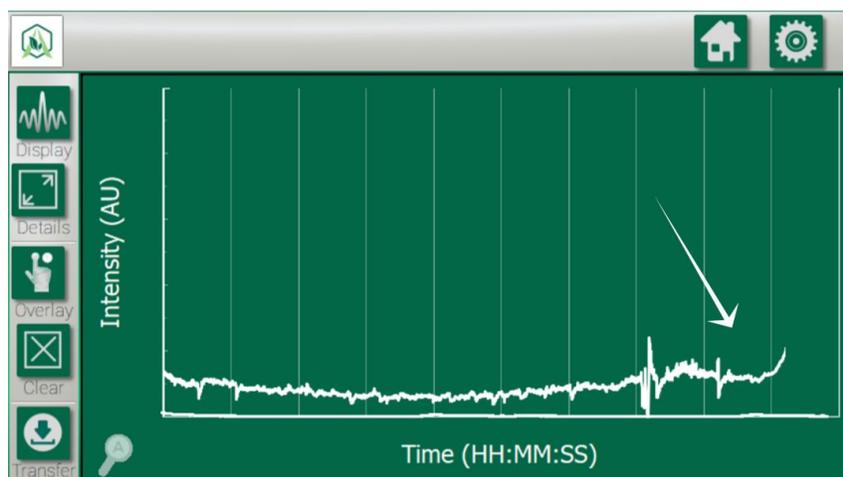

Note: Intensity and trends may vary. The important thing is the signal starts increasing.

Option B - Spectrum View: This view will show that there is a peak shift to the right, with the peak centered at around 490-510nm. An example plot is shown below.

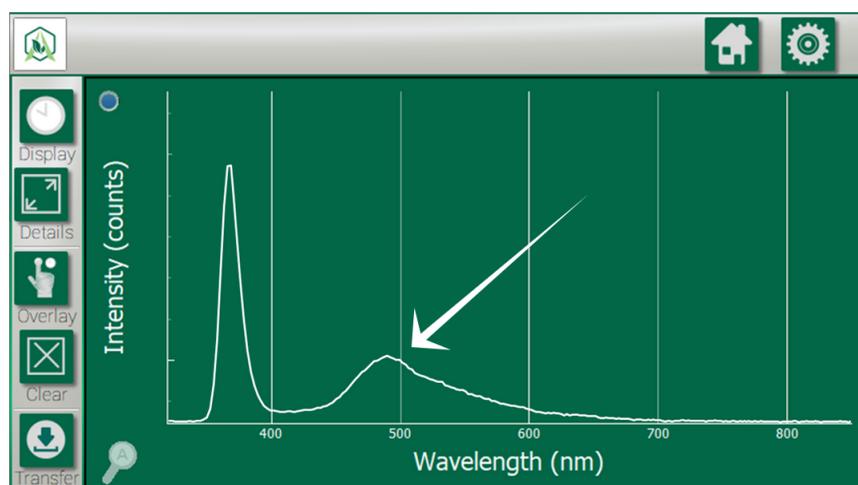

Step 7) Perform Flask Transfer

Once the Tails are identified, perform a flask transfer as per usual. Keep in mind that the signal will be very low and all ambient lighting effects will greatly increase

Step 8) Turn Off Recording

This step is only applicable if you chose to record your run. If you recorded your run, tap "Record Off". The circle above this button will turn red when it is no longer recording. Then, plug in a USB stick to the bottom of the display. Press "Transfer" to transfer your run data to a USB stick. It will upload a file in CSV format, easy to work with in Excel.

Section 7: Issues

- 1) If the signal is an abnormally low signal, a few things should be checked:
 - a. Ensure that the alignment of the FRACTION FINDER sensor is correct. This can be done by trying to align the screw in the “light shield” and the top of the light shield with the cooling water port of the condenser; if they are aligned, the alignment is optimal. The “light shield” is the half-circle piece of hardware adjacent to the light source.



- b. Ensure that the integration time is set correctly by either using the AID AUTO or following the procedure outlined in step 5
- 2) If the signal looks sporadic and very abnormal, a few things should be checked:
 - a. If it is right after a flask transfer, wait a few minutes – this is normal behavior
 - b. If the vacuum pressure is still changing quickly, wait for the pressure to become more constant
 - c. If the boiling flask is heating significantly, wait for the boiling flask temperature to become more constant
 - d. The issue could be attributed to background light
 - i. Use the light-blocking tape provided in the kit
 - e. Ensure that the integration time is set correctly by either using the AID AUTO or following the procedure outlined in step 5
 - f. Increase the scans to average
 - i. This should not be set significantly higher than 5 - keep the value below 15
 - g. If none of the above are the problem – ensure that liquid is still flowing
 - h. If none of the above seem to be the origin of the problem, please take a photo of both your spectrum plot and your wavelength plot and contact customer service by calling (240) 492-6556 extension 3
- 3) If the system is not detecting the sensor (bottom left light on panel is red or yellow)
 - a. If the system was turned on, give the system up to 5 minutes, it may detect
 - b. Ensure that all cables are connected securely – especially the cable connecting the display unit to the sensor
 - i. It may be easier just to disconnect and reconnect the cables from the display unit and the sensor unit

- c. Contact customer service by calling (240) 492-6556 extension 3 if the above problems persist
- 4) Warnings about safe operating conditions for the FRACTION FINDER:
 - a. Currently, the FRACTION FINDER is specified to work up to slightly above 120 deg. C, please do not raise your condenser fluid temperature above this. Should this be a part of your SOP, then order the “Hot Tech Adapter” from Arometrix.com/shop. This will relocate the sensor to just prior to the collection flask.
 - b. The FRACTION FINDER housing (both the sensor and the display unit) are sensitive to distillate and extract, to increase sensor lifetime and reduce the likelihood of damage:
 - i. Wipe down the outside of the glass that the FRACTION FINDER will clamp onto before installing the sensor with ethanol, isopropanol, or another alcohol. **DO NOT USE ACETONE**
 - 1. WARNING: ENSURE THAT GLASSWARE IS NOT HOT!
 - ii. If an accidental spill occurs, try to wipe it off the sensor/display unit with a damp, not soaked, cloth/towel as quickly as possible. Dry off the area immediately afterward.

Other issues and suggestions:

- 1) We have a new forum on Arometrix.com. Join the form and ask questions to us, and to the community.
- 2) We are constantly working to fix any issues with the system, and appreciate you reporting any abnormal behavior, we will not leave you hanging and will address any issues you have ASAP.
- 3) If you find anything in this manual confusing or unclear, please customer support, we are more than happy to assist you, and do our best to do so in a timely manner.
- 4) If you want to see something new in the software please let us know and give your suggestion, we strive to make the FRACTION FINDER the tool that works for you!

Section 8: Software Update Instructions

At Arometrix, we strive to tailor-make all our products to our customers' needs. As we advance our algorithms, add features, fix bugs, etc., we release software/firmware updates. These are field-updatable. If you own a FRACTION FINDER, you can download our latest, free Firmware update to your software in the field: Version 1.2.2 - (if you do not already have it). This update will make FRACTION FINDER systems more cohesive and user-friendly. Read below for important instructions on how to go about this download.

Warning: *You should do these steps far in advance before using the FRACTION FINDER (~5-10 minutes)*

- 1) Find the .fff file by visiting arometrix.com, or by contacting sales@arometrix.com. Copy the FRACTION FINDER Firmware (.fff) file to a USB flash drive. (It is preferred the USB flash drive not have other data on it.)
- 2) Turn off the FRACTION FINDER.
- 3) Plug the flash drive into the USB port on the bottom of the FRACTION FINDER.
- 4) Turn the FRACTION FINDER on.

- 5) After the initial boot screen, you should see a Firmware updater screen appear on it. You will see text pop up saying things like authenticating and extracting the firmware.
 - a. You will notice that it will relatively quickly hit 41%, then it won't update at all for about 10 minutes. This is normal and should not be considered bad.
 - b. DO NOT UNPLUG THE FLASH DRIVE UNTIL STEP 6. This can cause your system to become corrupted and unrecoverable unless it is shipped to Arometrix.
- 6) After the firmware update, you should see the software boot up as normal.
- 7) Unplug the flash drive from the FRACTION FINDER.
- 8) Delete the .fff file from the flash drive. If you don't, and you plug it in, on bootup, it will try to update the firmware again, causing you to have to go through this entire procedure.

We are currently working on making the companion app for the data review that will work in conjunction to the transfer function. If you are willing and want to have input into the data review companion app, we would appreciate if you would share your data with us via email (to sales@arometrix.com). This is completely optional. If you do decide to share any of your data with us, we will transfer your data into a human-readable format, which we will give back to you, and will perform analytics on it. This will also give you the opportunity to give us feedback about what you'd like to see displayed in the companion app. And, as always, we appreciate any feedback you give.

Section 9: Factory Repairs

The FRACTION FINDER assembly is designed to provide years of trouble-free service. No field servicing of the unit is recommended. The unit should come with a Warranty Card.

Section 10: Optical Measurement

The FRACTION FINDER displays optical information in AU (arbitrary intensity units), named to highlight the fact that the unit is for reference, indication, and to assess trends. It is not currently for quantitative analysis. Quantitative measurement is a number that represents a characteristic in known, well-understood units. For example, your speedometer reads a quantitative number – speed. You know how fast you are going based on that number. Qualitative measurement lacks the reference of a number. The FRACTION FINDER gives qualitative measurement – and is used to assess trends, not absolute potency.

Section 11: Specifications and Appendix

Specifications	
Power:	100-240VAC 50/60 Hz CE Rated (12 Volt 1 Amp into Compute Module)
Interface:	Size 29 or Size 34 Glass (also fits on a wide range of adapters/extenders)
Sensor cable length:	2 feet
Units:	AU – Arbitrary Intensity Units
Mount	Laboratory stand bracket, pole up to ½”
Display	7 inch LCD TFT display
Optical detection range	300 – 1000 nanometers
Telemetry Options	USB

Section 12: Appendix

Manually Tuning Integration/Exposure Time

It is highly recommended to use the AID instead of following the procedure outlined below. The AID algorithm will do all the adjustment autonomously. However, manual setting is feasible.

Manually Setting Integration Time for Heads

Tune the Integration Time based on your desired parameters

1. Tune the exposure time so that the maximum intensity value (y-axis) is between 500-800 AU
 - a. The exposure time is pseudo-linear to the intensity (i.e. if the exposure time is doubled, the intensity will approximately double; if the exposure time is halved, the intensity will also approximately be halved)
 - b. The exposure time for the Heads typically is very small – the exposure time probably will not be above 2 ms (2000 μ s on exposure time setting panel), and may be lower than 0.1 ms (100 μ s on exposure time setting panel)
 - c. WARNING: The update time for the plot will increase with increased exposure time and decrease with decreased exposure time. Distillation is a slow process, so this will not be an issue
 - i. It is more important that there is a good signal than to have a fast update speed, so tuning to higher exposure times (as long as the intensity does NOT go above 800 AU – y-axis value), will ensure that the FRACTION FINDER will work as intended.

Manually Setting Integration Time for Main Body

- 1) Go to the Spectrum tab
 - a. If the maximum signal value is lower than 500 AU or above 850 AU
 - i. Hit the Light On/Off button to turn light off
 - ii. Wait for a new scan of the background light in the room
 - iii. If the maximum value of this spectra is above 700 AU:
 1. Adjust the exposure time so that this value is less than 700 AU by decreasing it
 2. The exposure time is pseudo-linear to the intensity
 - iv. Hit the Light On/Off button to turn light on
- 2) For the next ~20 minutes, the exposure time will need to be adjusted as the signal change
 - a. Factors that increase how often it will need to be adjusted are:
 - i. The darkness of the distillate (darker increase frequency of exposure time adjustment)
 - ii. Turbulent flow rate (increases the of frequency exposure time adjustment up to a point, then will not have an effect)
 1. This is more of an issue for Tails than the Main Body
 - iii. Background light (more ambient/background light will increase the frequency of adjustment; higher ambient/background light will also reduce the overall signal)

Section 13: Terms and Conditions

TERMS OF USE, LIMITED WARRANTY & LIABILITY WAIVER

Arometrix offers all of its products with the following terms and conditions and notices as follows. By accepting and/or using a Arometrix product, you hereby acknowledge and agree to the following terms and conditions, and acceptance of these terms and conditions are a condition precedent to any purchase/sale agreement between you and Arometrix.

EXCLUSIVE OBLIGATION: The Arometrix product you are purchasing has been designed for a specific use within a set of suitable operating conditions, as set forth in its User Manual, or as indicated otherwise by Arometrix. Any use of the Arometrix Product for any purpose or under any conditions, other than those specified, shall render any limited warranty void, and shall expressly invalidate any liability of Arometrix for damages as a result of such misuse. **USER LIMITATION:** You may not modify, copy, distribute, transmit, display, perform, reproduce, publish, license, create derivative works from, transfer, or sell, any information, software, products or services obtained from or created by Arometrix to any third party, without the express written consent of Arometrix to do otherwise. Any violation of this provision shall give rise to an indemnification of Arometrix by you, for any third party claims arising out of such violation. **THIRTY (30) DAY LIMITED WARRANTY:** All Arometrix products are warranted against any manufacturing defect for a period of thirty (30) days from the date of purchase, unless such product is a custom-work for you and not a standard Arometrix product. Any product qualifying as a custom-work shall not be warranted against any defects for any purpose, and your acceptance of such custom-work shall relieve Arometrix of any liability for any purpose. WITH THE EXCEPTION OF THE LIMITED WARRANTY ABOVE, YOU AGREE ANY AROMETRIX PRODUCT IS PROVIDED AS IS, EXCLUSIVE OF ANY WARRANTY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED. **LIMITATION OF LIABILITY:** You agree and acknowledge, Arometrix shall have no liability to you whatsoever for any direct, indirect, punitive, incidental, special consequential damages arising out of or connected with the use or misuse of its products. In particular, given the nature of Arometrix products, you agree and acknowledge, under no circumstances whatsoever shall Arometrix be liable to you for any consequential damages for damage to any non- Arometrix product or service, arising from the failure, use or misuse of a Arometrix product, including, but not limited to, any vacuum system, engine, vehicle, factory, or the like. In the event, a court of law with proper jurisdiction finds Arometrix liable to you for any purpose, you agree and acknowledge Arometrix's maximum liability shall not exceed the purchase price of one unit of product giving rise to such liability, or \$250.00, whichever is greater. **ENTIRE OBLIGATION:** These terms and conditions express the entire obligation of Arometrix with respect to its products. If any part of these terms and conditions are deemed void, invalid, unenforceable or illegal, including, but not limited to, the warranty disclaimers, liability disclaimers and liability limitations set forth above, then the unenforceable clause or sentence may be disregarded with the remainder of these terms and conditions valid and enforced. In the event the unenforceable clause or sentence leaves a void in these terms and conditions, a provision closely matching the intent of the unenforceable provision should be deemed inherent within these terms and conditions, slightly modified to render such provision valid and enforceable. **GENERAL:** These terms and conditions are governed by the laws of the State of Delaware, USA. You hereby consent to the exclusive jurisdiction and venue of the Courts of Delaware, in all disputes arising out of or relating to the use of this product. Use of this product is unauthorized in any jurisdiction that does not give effect to all provisions of these terms and conditions. **MODIFICATION OF TERMS AND CONDITIONS:** Arometrix reserves the right to change the terms, conditions, and notices under which their products are offered